

封面

AUCUS ENTERTAINMENT

User Manual

PORTABLE SPEAKER PS-204

Please read this manual carefully before using the product. 20240703A1

1. Important Safety Information

- This Sign Is Only For Use In Areas Below 2000 Meters Above Sea Level
This Sign Is Only For Use In Non-tropical Climates Only

Before Using This Product, The User Must Check That Your Use Environment Must Be In The Area Below 2000 Meters Above Sea Level, And Storage In The Non-tropical Climate Area. Do Not Use The Machine When It Does Not Meet The Requirements Of The Required Use Environment, So As To Avoid Future And Other Safety Problems. The Design And Production Of This Product Meet The Requirements Of GS4435:1-2022, GB4854.1-2021, GB 17825.1-2022 Standards.

Critical Safety Note

The Safe Voltage Range Of The Machine Is AC 110-240-50/60hz

FOR ALL PRODUCTS:

- (1) Please Read This Manual Carefully, Heed All Warnings And Follow The Instructions.
(2) This Product Is Not Waterproof, Do Not Expose It To Dripping, Splashing, Rain Or Moisture, Do Not Use A Damp Cloth To Clean This Product.
(3) Please Keep The Product Around Good Ventilation, And Place It At Least 30cm Away From The Surrounding Items, And Do Not Set It Near Any Heat Source, Such As Radiator, Hot Air Regulator, Stove Or Other Heat Equipment (including Amplifiers, Etc.).
(4) Protect The Power Cable From Being Trampled Or Squeezed. Do Not Pull The Power Cable When Removing The Power Plug. Do Not Touch The Power Cable With Wet Hands, Otherwise, Short Circuit Or Electric Shock May Occur.
(5) Only Accessories/accessories Specified By The Manufacturer Can Be Used.
(6) In Case Of Thunderstorms Or If You Do Not Use This Product For A Long Time, Unplug The Power Plug.
(7) Read The Instructions Carefully Before Plugging In The Power Supply For The First Time. The Voltage Of The Available Power Supply Varies By Country Or Region. Ensure That The Power Supply Voltage In The Area Where The Device Is Used Conforms To The Required Voltage Of The Product.
(8) The Unit Battery Or Battery Pack Or Battery Combination Shall Not Be Exposed To Sunlight, Fire Or Similar Overheating Environment. Warning: If The Battery Capacity Is Reduced Or Damaged, Please Contact After-sales Service.

Please Avoid Using This Product In The Following Places:

- * Extremely Hot Or Cold Environments
* A Place Where There Is Violent Vibration
* An Environment Of Strong Electromagnetic Interference
* Dusty, humid, high temperature fumes



2. Functional Features Of This Product

Rear Exterior Design: By Blending Classic And Modern Aesthetic Elements To Create Unique Visual Effects, Become A Fashion And Trend Setter.

Unique Led Strip Ring: Around The Front Of The Large Size Led Magic Light Ring, Polymer Material Light Crystal Clear, Patent Structure To Create A Different Appearance, A Variety Of Dynamic Light Effects To Create An Immersive Music Atmosphere.

MULTI-SCENE SOUND: Internal Press For A Variety Of Scenes Of Sound Mode, Fast And Convenient, One-click Switch, To Provide The Best Use Experience.

Outdoor Mode: Low Frequency Dive Full And Powerful, With Stronger Penetration, Increase The Music Coverage Area.

User Mode: The Treble And Bass Effects Of The Music Can Be Adjusted By Itself To Meet The Individual Needs Of Users.

The Bluetooth Interconnection: The Two PS-204 Are Connected Through Two To Form A True Wireless Bluetooth Stereo System To Achieve Better Listening Effects.

Choice Materials: Precision Machining Stainless Steel Solid Handle, Laser Welded All Iron Frame, Built-in Corrosion Resistant Fasteners.

Independent Mcu Dual Dsp Architecture, 24bit Low Noise Adc, 12s (inter-c Sound) Full Digital Power Amplifier.

Q30 Large Magnetic Steel Long Roll Bass, Nfeb Internal Magnetic High Sensitivity High Treble, Compact Variable Diameter Inverter Tube.


3. Package Components And Technical Parameters

Table with 4 columns: SEQUENCE, SPECIFICATION, MODEL, QUANTITY. Lists items like Host Computer, Power Adapter, Power Cord, TYPE-C Live Online, User Manual.

Technical Parameter table with 2 columns: Underlying Parameter, MODEL, PS-204. Lists Power Supply, Speaker Configuration, Frequency Response, Battery Specification, Dimensions, Blue Spirit Edition, Supported File Format, Support Usb Disk, Net Weight.

* The Above Specifications Are For Reference Only, Due To The Continuous Improvement Of The Product, The Design Specifications And Functions Are Subject To Change Without Notice.

2. Sound Operating Panel

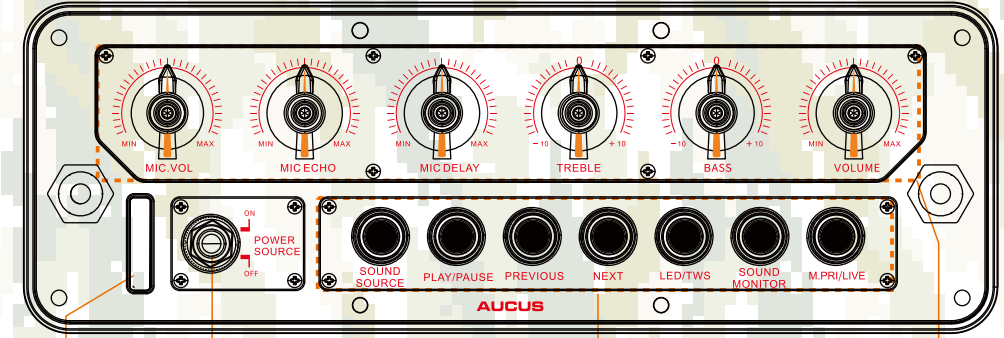

1 Battery Level Indicator, Displays The Battery Level And Charging Status

2 Power Switch, Dial ON To Power On, And OFF To Power Off.

3 To Set The System Mode Area, The Keys From Left To Right Ar:

Sound Source: Short Press, Cycle To Switch Different Audio Sources, In Turn, Bluetooth, Aux, Ukb (when Inserting U Disk). During Playback, Tap To Pause Playback And Tap Again To Resume Playback when Playing, Tap To Pause Playing, And Tap Again To Resume Playing. Bluetooth, Ukb Input, Short Press, Play The Previous Song. Bluetooth, Ukb Input, Short Press, Play The Next Song.

Sound/Monitor: 1. Switch Light: Short Press To Switch The Lighting Effect Of Led Lamp Circle, Press Twice In Succession, Turn Off The Led Lamp Ring. 2. Bluetooth Interconnection: See Article 7 For Details.

MIC Priority/Live Mode: 1. Switch The Sound Mode: When Playing, Short Press, Cyclic Switch The Sound Mode, A Total Of Indoor Mode, Outdoor Mode, User Mode Three. 2. Switch The Microphone Mode: When Inserting The Microphone, Press The Loop To Switch The Microphone Mode, There Are Three Types Of Wired Microphone Mode, Wireless Microphone Mode And Musical Instrument Mode.

Volume Sound Effect Adjustment Area: Each Knob Counterclockwise Rotation Decreases, Clockwise Rotation Increases. From Left To Right

MIC VOL: Adjust The Microphone Volume. MIC Reverb: Adjust The Microphone Reverb Effect, The Microphone Reverb Effect Is Related To The Levels, The Microphone Delay Function Does Not Work.

MIC Delay: Adjust Microphone Delay (max. 200ms). Treble Regulation: Adjust The High Pitch Effect Of The Microphone When Inserting The Microphone. Adjust The High Pitch Of The Music When The Microphone Is Not Inserted. (user Mode Only)

Bass Tuning: Adjust The Bass Effect Of The Microphone When Inserting The Microphone. Adjust The Bass Effect Of The Music When The Microphone Is Not Inserted. (user Mode Only). MUSIC VOL: Synchronously Adjust The Music Volume, Headphones Monitoring Volume, Live Upload Music Volume. * For Normal Use, Please Microphone Reverb, Microphone Delay, Treble Adjustment, Bass Adjustment Rotate Each To A Central Position For Optimal Use.

Product Warranty Card

After-sales Service Clause

- Dear Users, Thank You For Purchasing Our Products!
1. From The Date Of Purchase Of The Company's Products, Within One Year To Enjoy The Company's Product Quality Caused By The Failure Of Free Maintenance.
2. Please Read The Relevant Contents Of The Manual Carefully Before Using The Product And When Encountering Faults.
3. When It Is Necessary To Repair, Please Contact The Local Maintenance Point Directly, Please Show The Valid Purchase Voucher During Maintenance, Otherwise It Is Regarded As Out-of-warranty Processing, If Lost, Please Contact The Company's Post-sale Service Department.
4. The Following Circumstances Do Not Belong To The Scope Of Free Warranty:
1. Damage Caused By Human Factors, Failure Caused By Improper Use Or Self-installation According To The Instructions.
2. The User Disassembles The Machine, Repairs It By Himself, Refits It Or Does Not Repair It By The Company.
3. Damage Caused By Force majeure (such As Flood, Fire, Earthquake, Lightning Strike, Etc.).
4. No Product Warranty Card And Purchase Voucher Or No File.
5. The Product Warranty Card And Purchase Certificate Do Not Match The Product Model Or Are Altered.
5. Over The Warranty Period Or Is Not A Free Warranty Scope, We Will Still Be Happy To Provide You With Good Service, And According To The Company's Standards Charge Fees.
6. After Maintenance, Based On The Maintenance Record Card, The Last Replacement Parts Continue To Enjoy Six Months Free Warranty.
7. After The User Opens Insurance Of The Warranty Period, He Must Sign On The Maintenance Record Card, Otherwise He Will Be Deemed To Have Waived The Right To Enjoy The Warranty Period Of The Replacement Accessories.

Maintenance Certificate

Form with fields: Product Name Model, User Name, Purchase Place, Date Of Purchase, Proof Of Purchase, Contact Number, Customer Address.

Maintenance Record


Table with 5 columns: Date, MODEL, Fault Description, Maintenance Unit, Repairers.

封底

THIS IS THE PROPERTY OF:

PHOENIX ELECTRONICS AND TECHNOLOGY JOINT STOCK COMPANY
Add: No. M01-L07, DUONG NOI A URBAN AREA, LA KHE WARD, HA DONG DISTRICT, HANOI CITY, VIETNAM

5. Description Of Rear Panel Socket

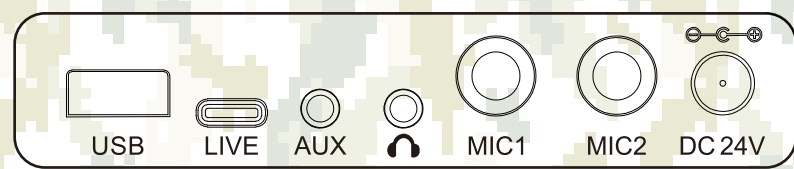

Rear Panel Socket Area: From Left To Right, It Is Shown As Follows:

USB Interface: Can Be Used To Insert Usb Flash Drive To Play Music. Live Interface: TYPE-C Interface, Can Be Connected To Mobile Phone Otg Live Or Recording. This Interface Provides 5v 1a Discharge Output.

AUX Interface: The AUX Audio Source Input For The 3.5mm Audio Line. Headphones: Insert A 3.5mm Headphone Cable To Monitor With Headphones.

MIC Ports 1 and 2: 6.35mm Plug For Corded Microphone, Wireless Mic Receiver, Musical Instrument. When Mic1 And Mic2 Are Used At The Same Time, Insert The Same Type Of Device To Avoid Affecting The User Experience.

Power Adapter Interface: It Is Used To Insert The Standard Power Adapter Of The Machine, Do Not Use Adapters Of Other Specifications To Avoid Security Risks.

Microphone Automatic Detection: When This Product Detects The Insertion Of 6.35mm Plug Of Wired Microphone, Wireless Microphone Receiver, Musical Instrument, It Will Automatically Switch To Microphone Mode, And Automatically Switch To Indoor Mode When Pulled Out.

Otg Live Operation Guidelines: Using The Standard Type-c Live Broadcast Line Of The Machine, Connecting The Speaker Live Broadcast Interface And The Type-c Live Broadcast Port Of The Mobile Phone, The Function Of Internal Recording Live Broadcast Can Be Realized. A Type-c Adapter Needs To Be Configured For An Iphone Or A Mini Usb Port.

6. Playback And Operation Guide

- (1) Power On: The Power Switch Is Set To On, Shutdown: The Power Switch Is Turned Off.
(2) Standby: In The Startup State, No Music Signal Input For More Than 10 Minutes, Enter The Standby State. In Standby Mode, The Battery Indicator Works Normally, The Key Indicator Blinks Slowly, And Other Functions Stop. Press Any Key In The Setting Area To Exit The Standby State And Resume The Normal Startup State.
(3) Automatic Shutdown: In Standby State, Standby For More Than 30 Minutes, Automatic Shutdown: When The Internal Battery Is Exhausted, It Automatically Shuts Down.
(4) When The Internal Battery Is Low, The Battery Indicator Blinks Quickly And The Voice Prompts That The Battery Is Low, Please Connect The Power Adapter To Charge The Battery As Soon As Possible.

6.1 Bluetooth Input

Bluetooth Pairing: Switch To Bluetooth Input, Hold Down The Audio Source Key For 3 Seconds, Disconnect The Current Bluetooth Connection, And Enter Bluetooth Pairing.

Bluetooth Connection: Search for connection "PS-204" with your Bluetooth device and click connect.

Bluetooth callback: When the device is powered on, it automatically searches for the Bluetooth device connected to the last time it was used.

Bluetooth playback: In The Successful State Of Bluetooth Pairing And Connection, Directly Select The Track That Needs To Be Played On The Player.

Tip: * If The Bluetooth Player Is A Mobile Phone, The Speaker Will Automatically Connect To The Phone When Switched To Bluetooth Input (The Phone That Was Last Successfully Connected).

* Bluetooth Transmission Distance Is Affected By Environmental Factors, The Normal Distance Is About 10 Meters, If You Find Staccato, Noise, Please Play.

6.2 USB INPUT

When The Speaker Recognizes That The U Disk Is Inserted, The System Will Automatically Switch To The Usb Audio Source For Playback. Please Prepare The Following Work And Understand The Precautions:

- * Please buy regular manufacturers and channels of the brand USB flash drive, if the expansion of the USB flash drive may cause some songs can not be played;
* Format the U disk to FAT or FAT32 format, the machine does not support NTFS format, theoretically supports a maximum of 128G;
* Try To Copy The Song File (mp3/wav And Other Audio Formats) To The Root Directory Of The U Disk;
* Do Not Copy Audio And Other Files That Are Not Supported By The Machine, Otherwise It May Not Be Able To Read, Play And Other Failures;
* When Inserting The Usb Disk, Please Pay Attention To Check The Front And Back Of The Memory Device;
* If The Direction Is Not Correct, The Memory Device Cannot Be Inserted And May Be Damaged.

6.3 AUX Input

The Back Panel Of The Machine Has A 3.5mm Line Audio Aux Input Jack, When You Need To Play The Audio Input Device, Press The Audio Source Button To Select The Aux Line Input Working Mode. After The System Is Connected, The Player Should Turn On All The Playback Volume, And Adjust The Required Volume With The Music Volume Knob Of The Speaker: In Line Input Mode, The Broadcast Control Button Cannot Be Used To Switch Up/Down And Pause Operations.

7. Bluetooth Interconnect

The Bluetooth Interconnection Function Means That Two PS-204 Can Be Connected Through Bluetooth Interconnection To Form A True Wireless Bluetooth Stereo System, Which Achieves Better Listening Effects.

Blue Tooth Interconnection Operation Reference:

- 1. Switch The Sound Source Input Of Both PS-204 To Blue Tooth Input, Long Press The Soundsource Key Until The Speech Sound Is Shown As "blue Tooth Matching".
2. Long Press The Blue Tooth Interconnect Button On Any Machine Until The Voice Shows "Two Pairing", And The Led Ring Flashes Blue And White.
3. After The Connection Is Successful, The Voice Is Displayed As "Two Connected", And The Led Ring Stops Blinking. (1 Connection Fails Within 20 Seconds, Will Exit The Connection, And The Led Strip Stops Blinking.)
4. Use Mobile Phone Or Tablet With Blue Tooth Function To Search For "PS-204" And Establish A Blue Tooth Connection.

* Pair And Connect The Two Machines Successfully Connected To The Blue Tooth Interconnection, Which Are Divided Into The Host And The Slave Machine. The Machine That Long Presses The Blue Tooth Interconnect Button Is The Slave Machine, And The Other Machine Is The Host. The Functions Of The Host Can Be Used Normally, And Only The Music Volume Knob Can Be Used In The Slave Machine.

* Only Bluetooth Or Usb Audio Sources Can Be Transferred Between Two Machines When Bluetooth Is Connected. Aux And Microphone Inputs Cannot Be Transferred Between Two Machines.

7. Troubleshooting

Improper operation is often mistaken for a malfunction or abnormal function, if you think that there are any problems with the machine, please check as follows: Sometimes the fault may occur in other components. In this case, please check the other components and electrical products used. Check if the fault cannot be rectified after completing the following checks, please refer to the repair to the nearest Matsukawa authorized service center or dealer. If the machine works abnormally due to external reasons (such as static electricity), turn off the power and start it again to restore normal work.

Troubleshooting table with 3 columns: Fault Phenomenon, Possible Cause, Treatment Method. Rows include Turn On The Power No Sound At All, Sound distortion, MIC is silent, Cannot be used after charging, Bluetooth Connection Failure, Usb Connecting.

Due To The Needs Of Engineering Orders, If There Are Any Changes In The Product Appearance, Color, And Configuration, Please Refer To The Actual Product.

PRINTED IN CHINA

正面

背面